


## Air Machine - Coin Box Sleeve Removal and Replacement

1. Loosen bolts for the air compressor mounting bracket, a  $\frac{7}{16}$ " nut driver or socket wrench is recommended.
2. Remove the bolts for the coin box sleeve, lift up and slide it out.
3. Install new coin box sleeve by reversing steps.

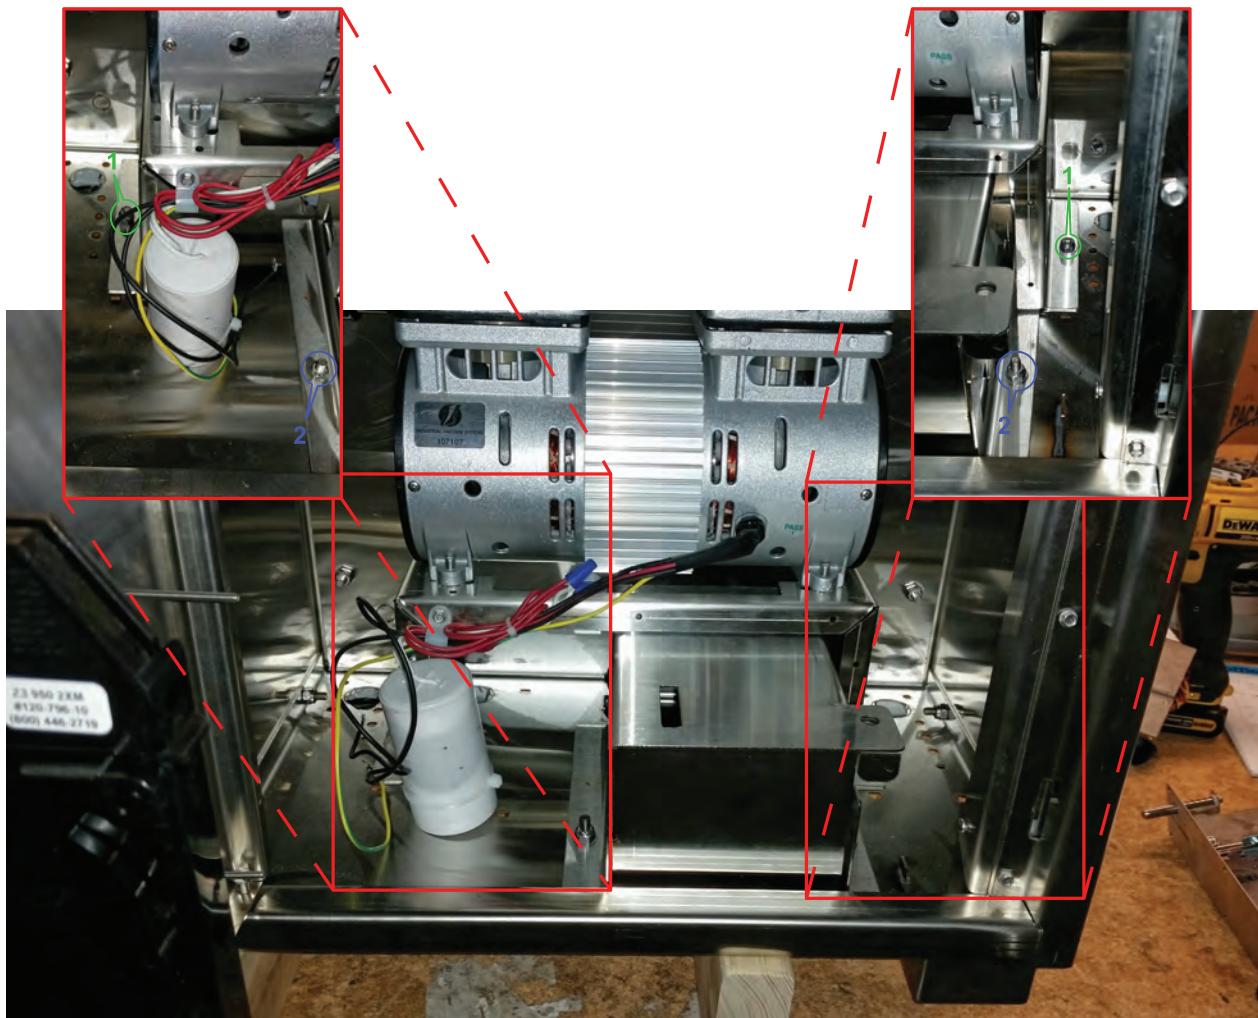

INCREDIBLY POWERFUL

INDUSTRIAL VACUUM SYSTEMS