

# Foam Media Replacement

- 1). Using a #2 Phillips screwdriver, remove two screws holding the brush block to the brush housing.

DO NOT REMOVE THE TUBES FROM THE 3 PORT FITTING.

- 2). Separate the Foam Block from the brush block by holding the Foam block and rotating the brush block counter clockwise.

AVOID KINKING THE TUBES.


- 3). Using a " wrench, unscrew the 3 port fitting - Leave the tubing attached to the 3 port fitting.

Avoid kinking the tubes by turning the holding the fitting and turning the block.

- 4). Remove any old foam media remaining in the 3 port fitting cavity.

- 5). Place new media in 3 port fitting cavity. It should be just inside. DO NOT PACK the foam media into the cavity.

Allow the 3 port fitting to position the foam media.

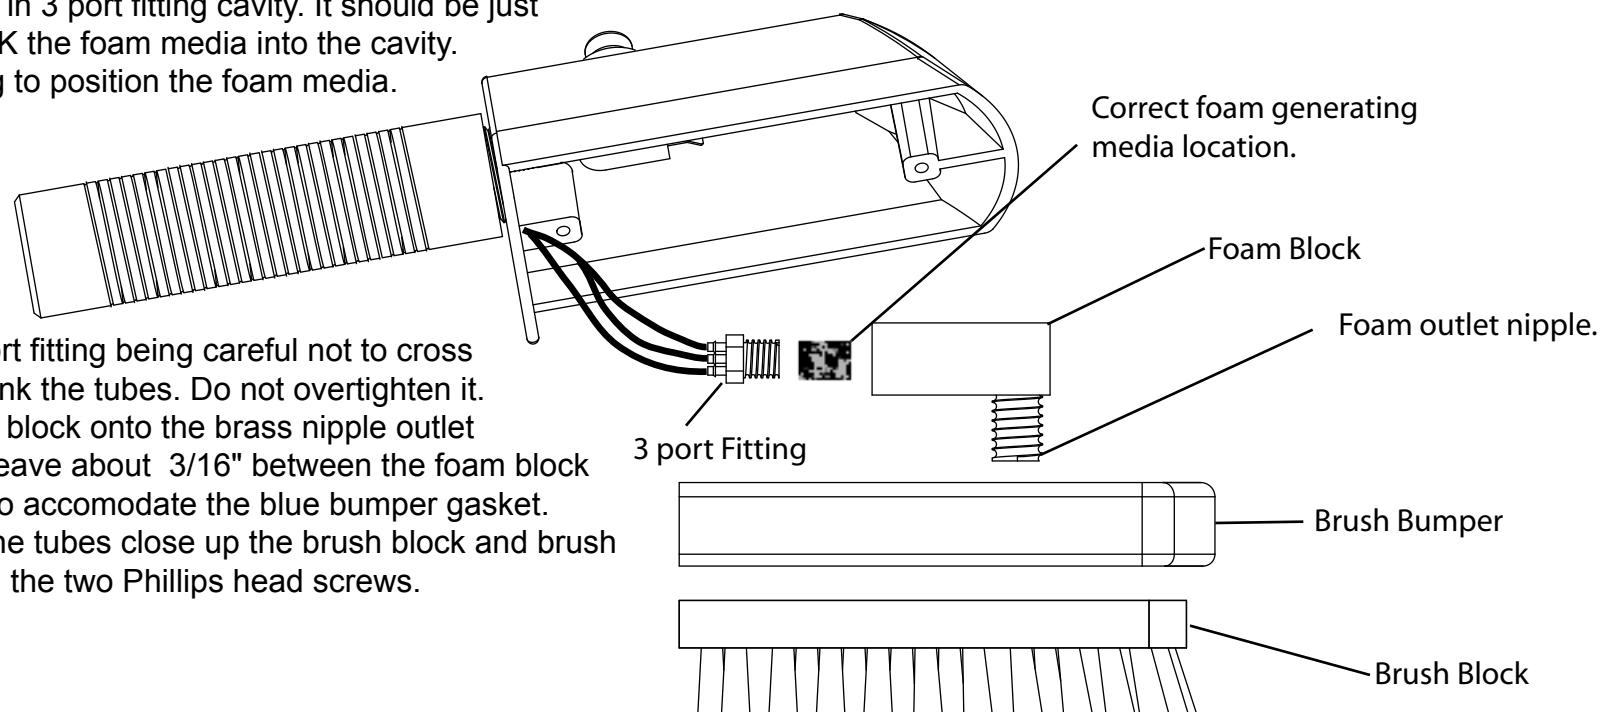

- 6). Reinstall the 3 port fitting being careful not to cross thread the fitting or kink the tubes. Do not overtighten it.

- 7). Thread the brush block onto the brass nipple outlet of the Foam Block. Leave about 3/16" between the foam block and the brush block to accomodate the blue bumper gasket.

- 8). Without kinking the tubes close up the brush block and brush housing and reinstall the two Phillips head screws.