


# Mat Station Installation for Concrete Islands

**CAUTION:** Read the instructions before installing  
Questions or Missing parts call 1-800-986-8227

## Parts Included

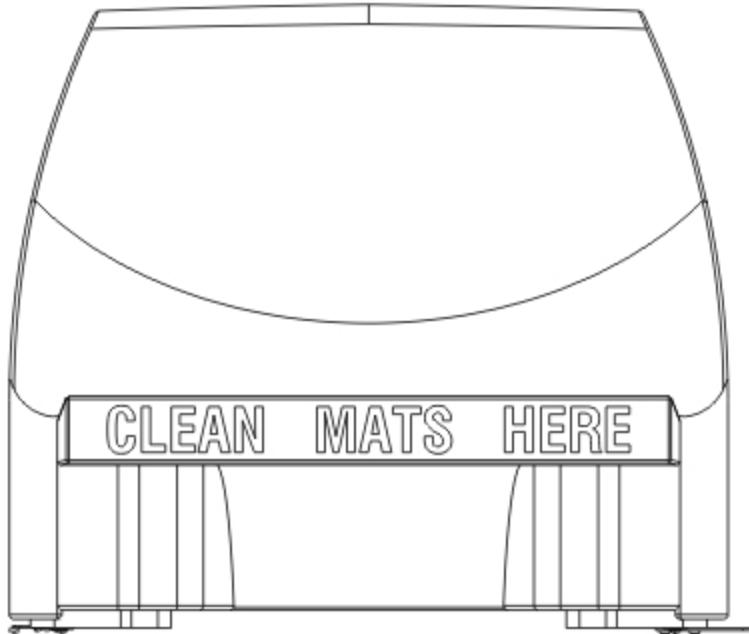


Lock Hasp Loop  
DE9481

Mat Station Assembly.

DE9482 - 12 GA LOCK HASP  
#12x " Pan Hd HP  
SS Wood Screw


106914- 1/4-20x1-1/4 SS PAN HD  
PHILLIPS MS  
108907- SS 1/4 FENDER WASHER

Parts included  
in the Assembly

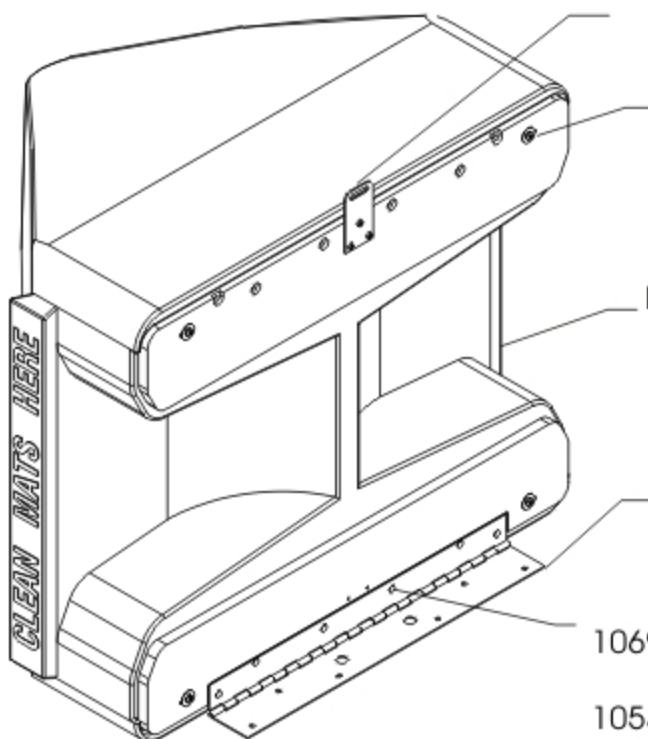

INCREDIBLY POWERFUL

- \* Marks the anchor Locations
- 6 on the Hinge
- 2 on the Hasp Loop

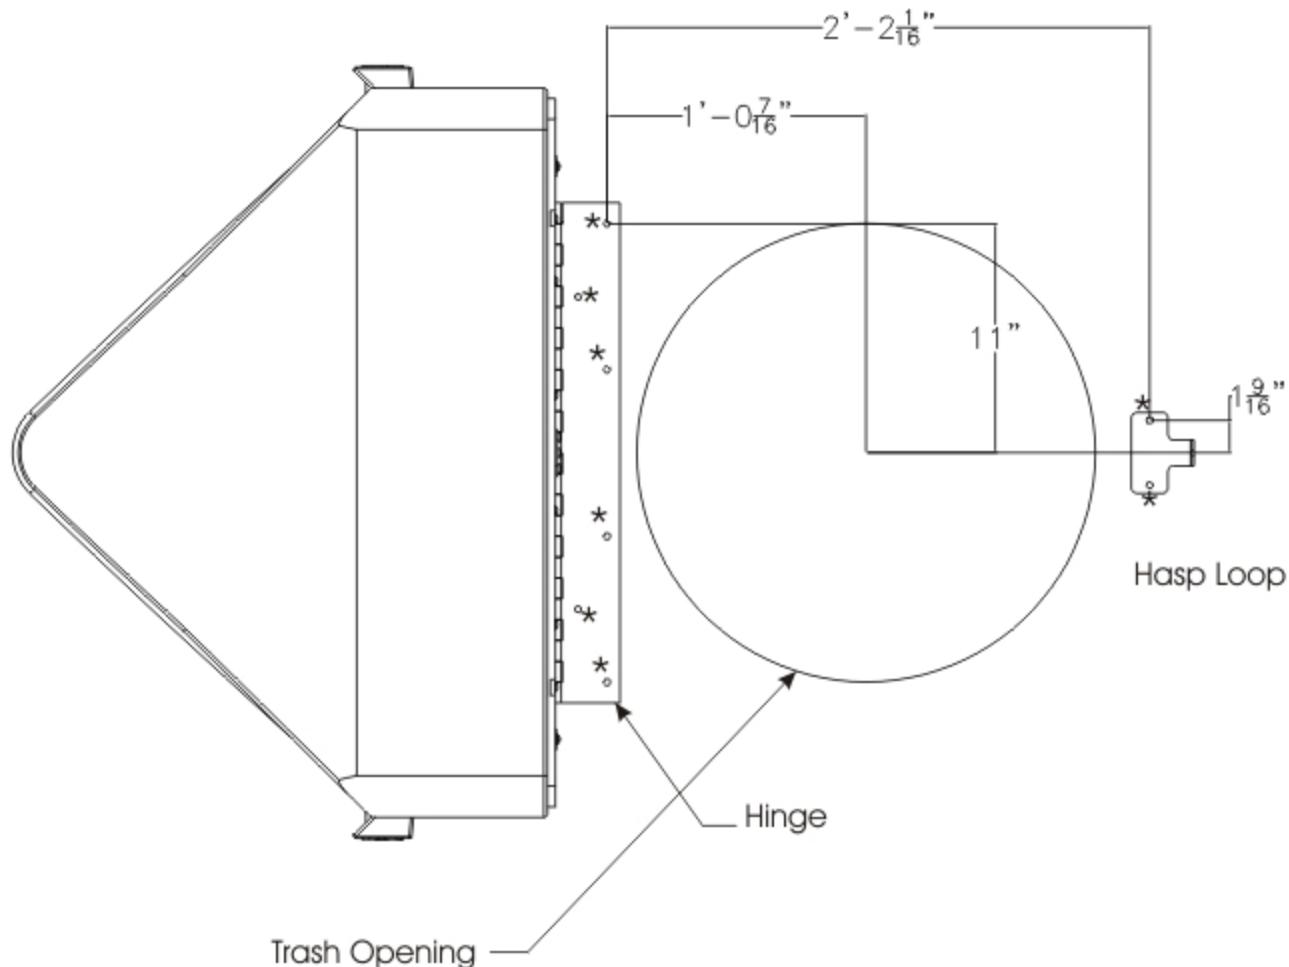

Position the hinge side of the Mat Station on your Island as shown. Mark the anchor locations as shown above. Then drill the 8 needed holes for the anchors. Use TapCon Concrete Screws or 1/4" Masonry Anchors to mount the unit securely.



INCREDIBLY POWERFUL